



Remote Printer Instructions

1. Idle Home screen

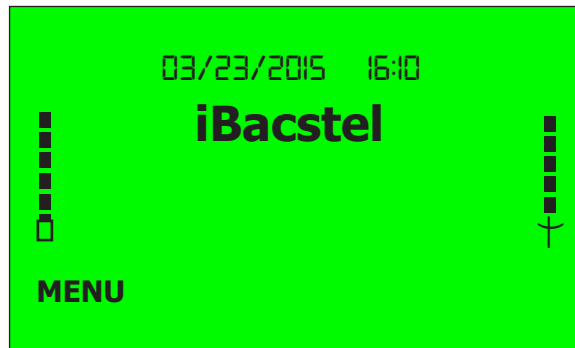



2. Appears with ringing sound when new order found. Press "OK" button to print the new order

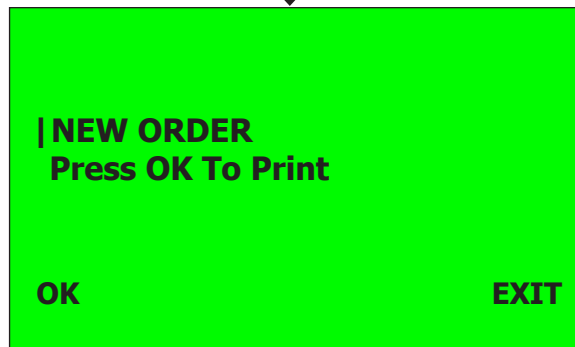

3. Printing the order




4. Press the green "OK" button to Accept the order or Press the yellow "C" or "CANCEL" button to Reject the order

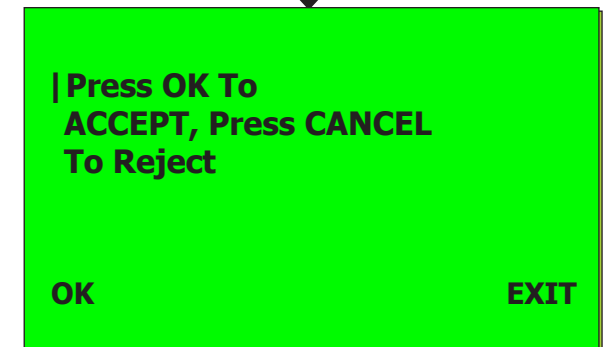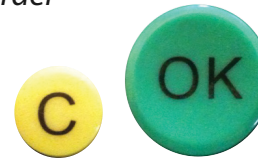

A. On Accepting an Order...

5. If the order is for delivery then enter the estimated time of delivery. If for Collection enter when it will be ready to collect.

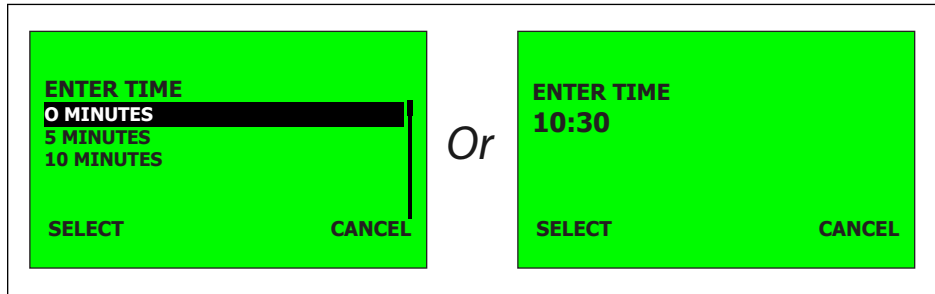


5. The device will print out the rest of the order information with the time as entered above and Screen will revert to the Idle Home screen.



B. On Rejecting an Order...


5. If the order is rejected a list of rejected reasons will appear. Use up/down arrow buttons to select the reason that best fits. Then press the green "OK" button to confirm

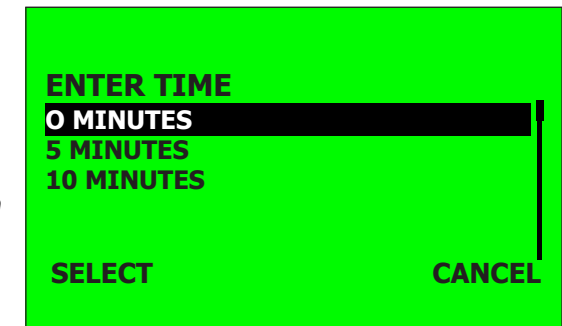


6. The device will print out the order with "Order Rejected" on the bottom and screen will revert to the Idle Home screen.



To reprint previous orders:

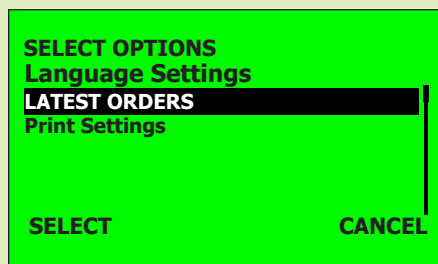


From Idle Home screen press "F1" button a list will appear. From this list select "Latest Orders" and press "OK" button.

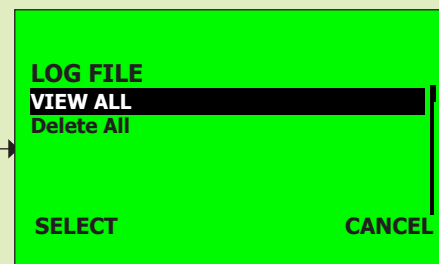

From this list select "View all" to view orders saved in log or select "Delete All" to delete all saved orders. And press green "OK" button to proceed.



Press up/down arrow button to view next or previous order.

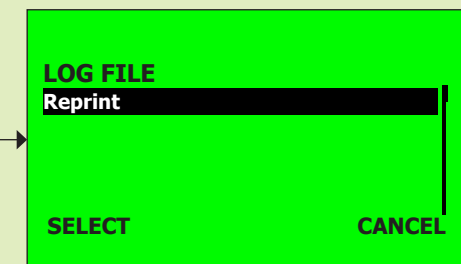

Press "F1" button and select "Reprint" from appeared list to reprint this order information.